 


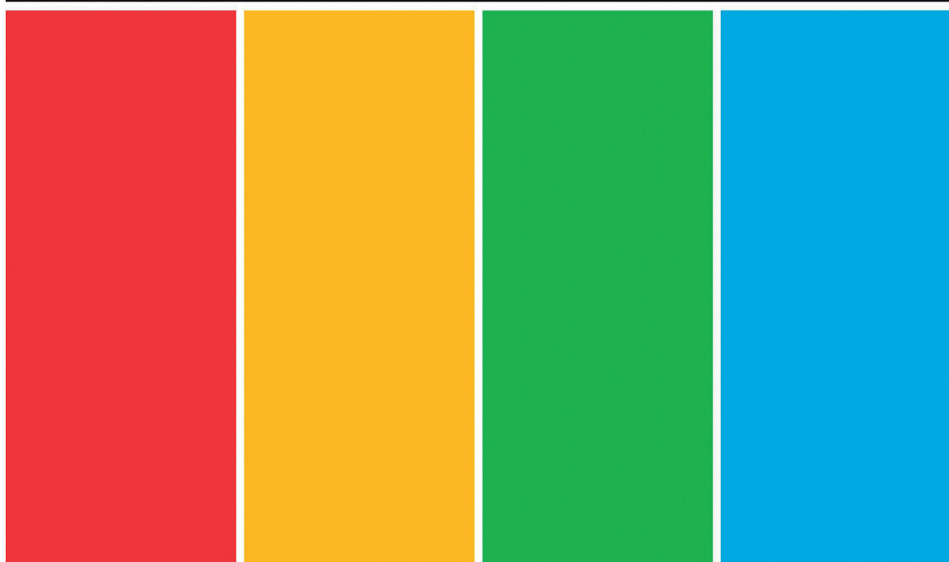

— KIDS



playpen by



Thank you for your purchase!

 
Our playpen doubles as an entertainment center for your children.

Keep them safe, while providing fun activities for them to enjoy.


The jumbo size toys that are incorporated into the walls are designed to be accessible from both the exterior and interior of the playpen. This feature allows your active toddler to benefit from the toys from the outside, while your baby can safely appreciate them undisturbed from the inside.

Happy playing!


The unique design of our playpen allows it to fit any space in your home. Once assembled, use the included key to freely configure the playpen into any shape.

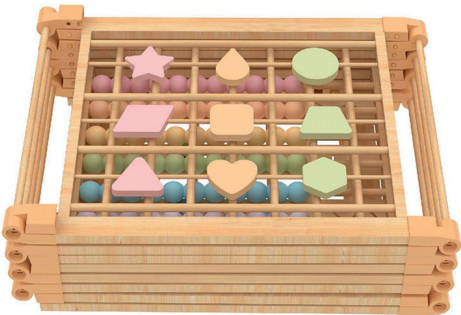


CONTENTS

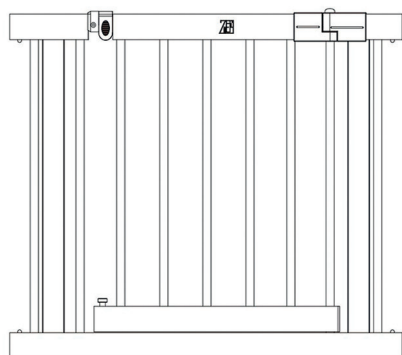 


①x1 28.3in

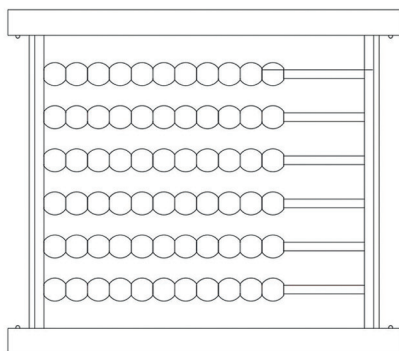 

②x1 28.3in

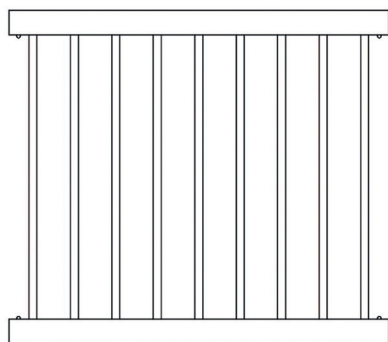 

③x4 / x6* 28.3in

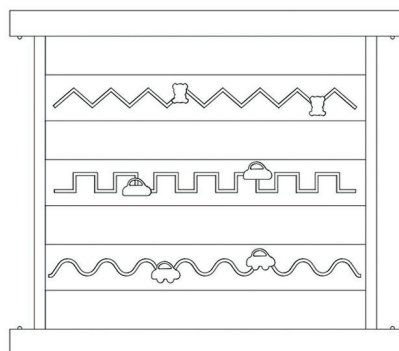 


④x1 28.3in


* Quantities with an asterisk are for the 10 panel playpen.



 
⑤x8 / x10* 21in

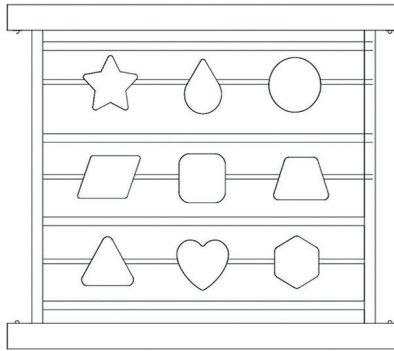

⑥x1 28.3in



 


⑦x8 / x10*

 






⑧x8 / x10*

   STEP 1

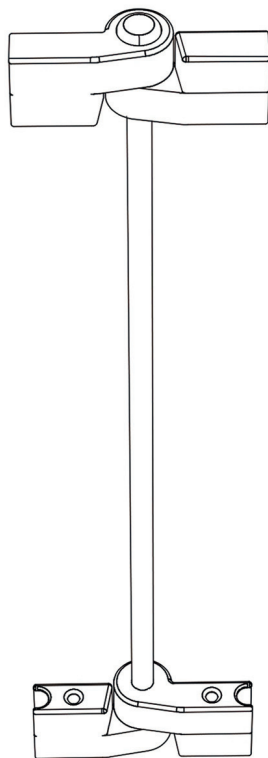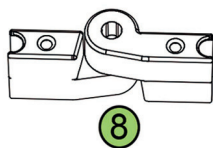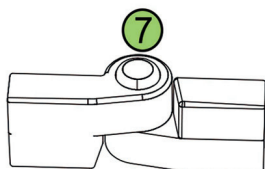

x4

     
STEP 2

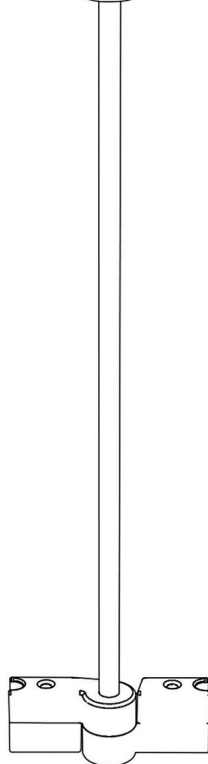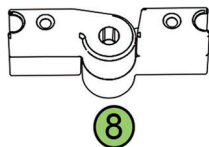
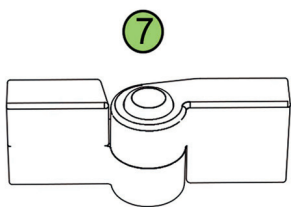


x4


STEP 3

   
Press the top button to adjust direction.

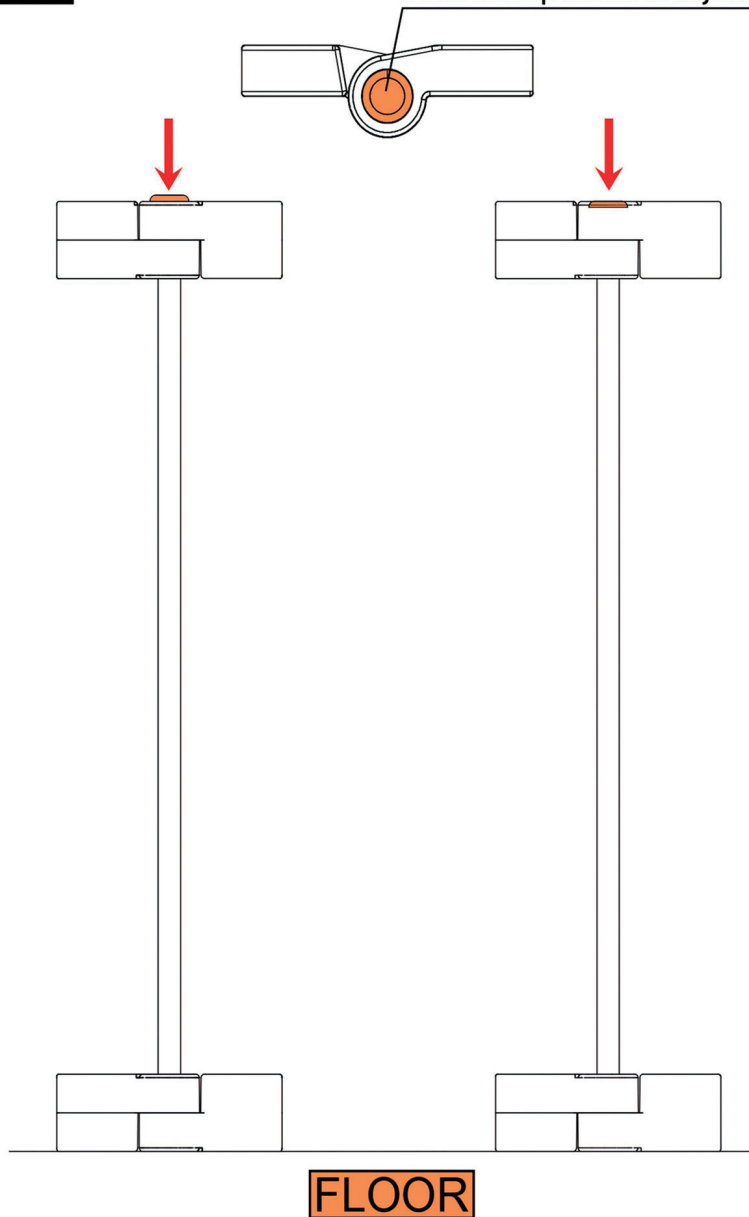

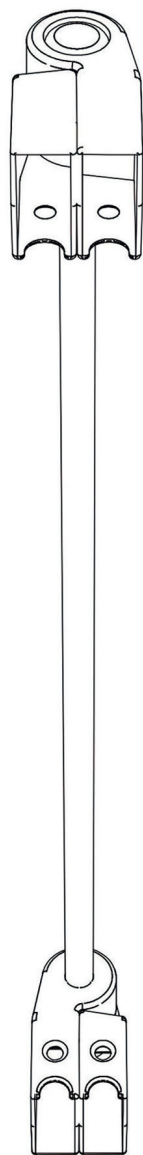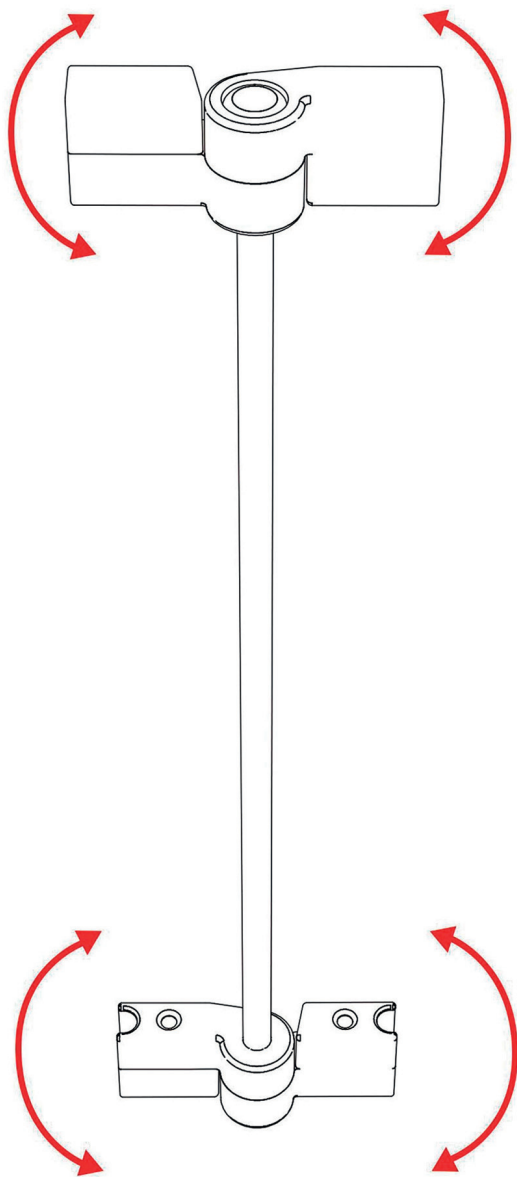

  
STEP 4

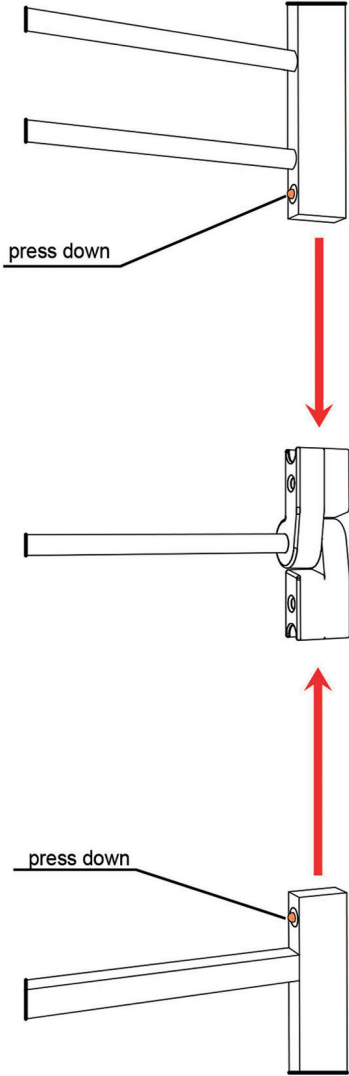

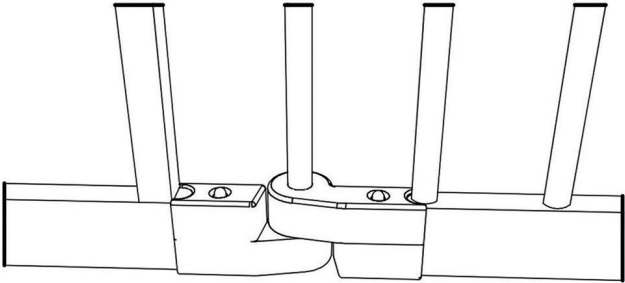


STEP 5

 
Please note the direction of **STEP 1** & **STEP 2**

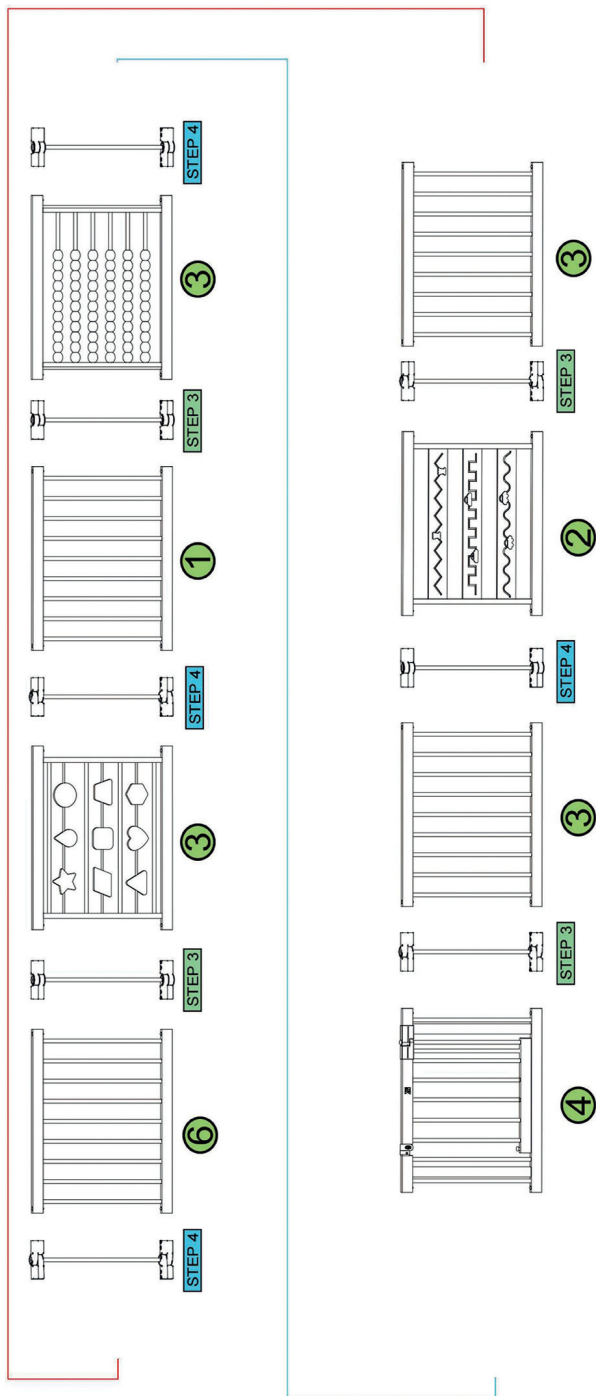

 
*For the larger playpen, repeat step 5 for the additional two panels

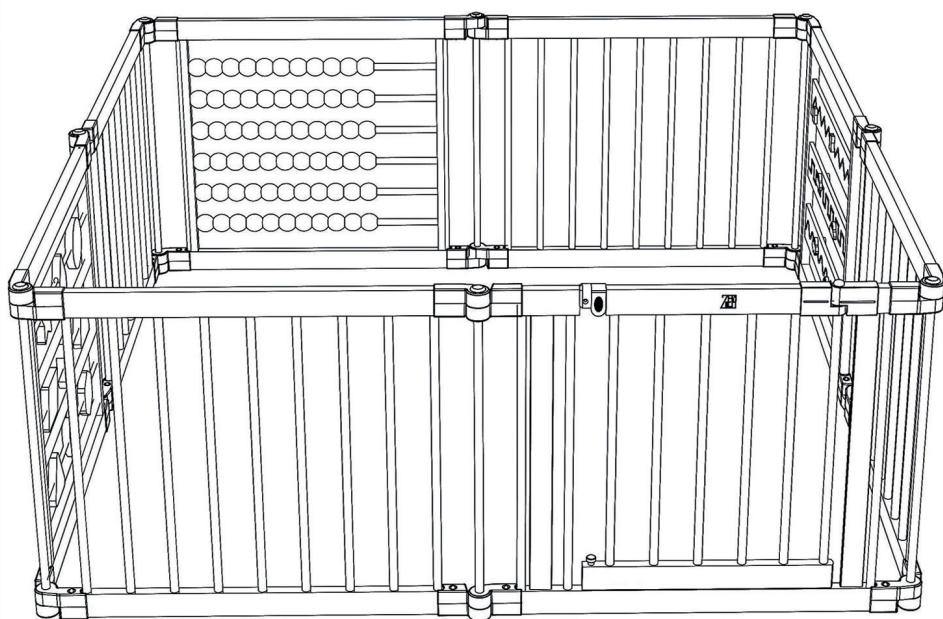


 
STEP 6

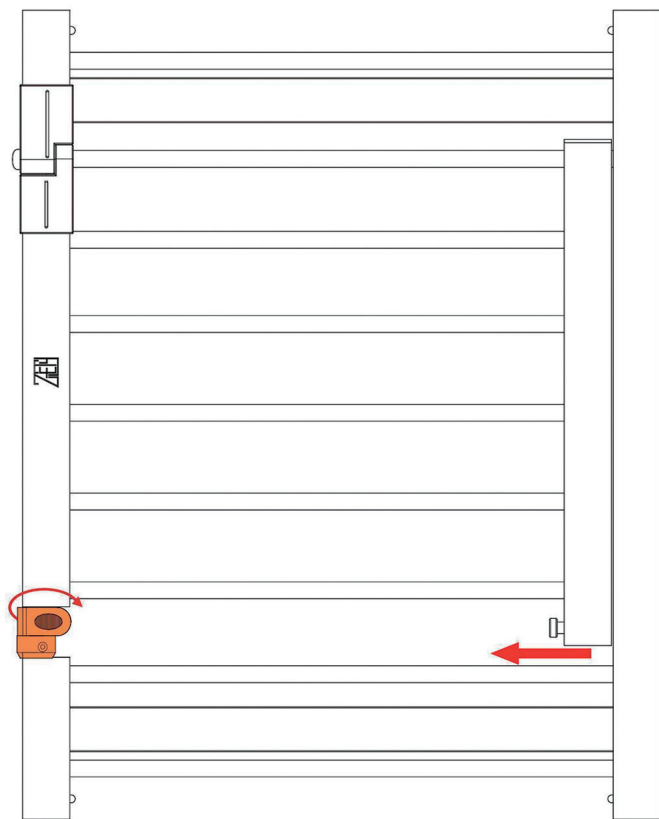


 Twist the locks to open and meantime slightly lift the door upward
(the bottom locked pin depth is 0.5in).

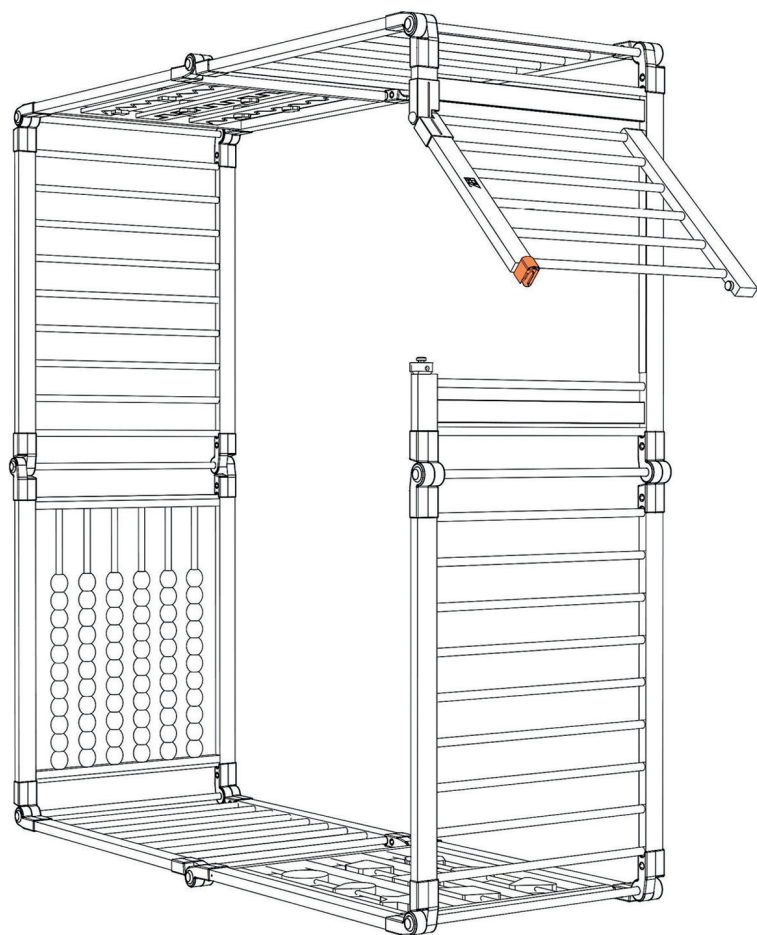

   STEP 7

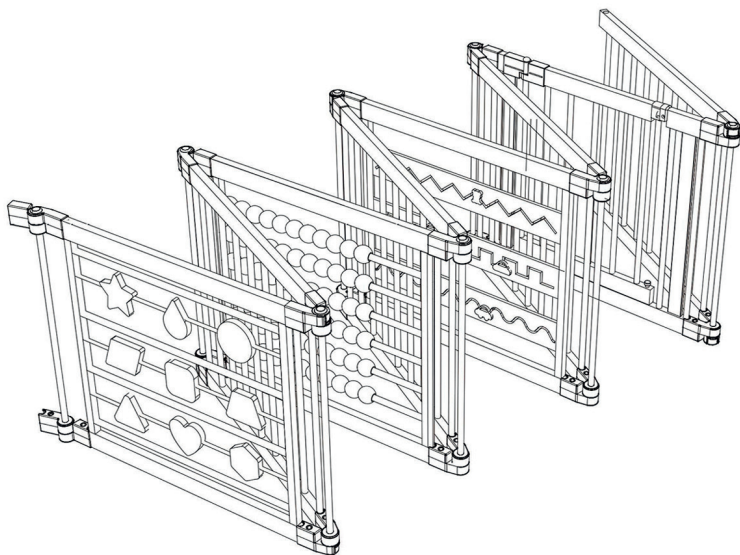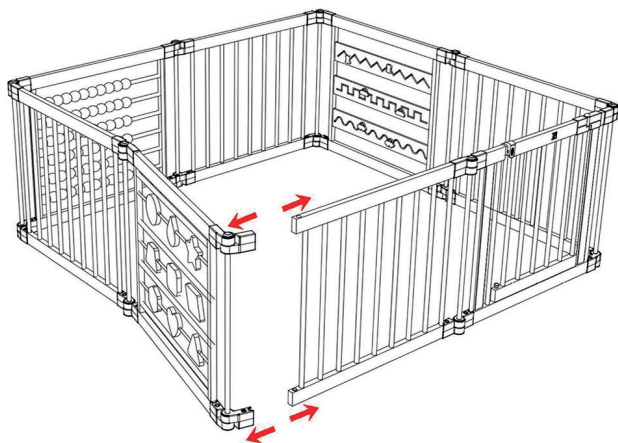

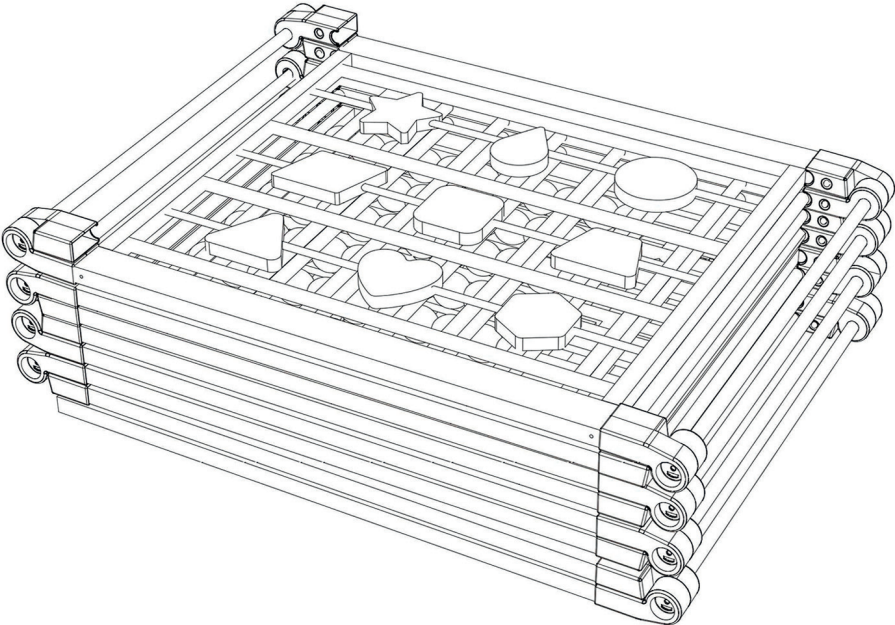



WARNING

Children have died or been seriously injured when enclosures are not securely installed

- ALWAYS install and use enclosure as directed using all required parts.
- STOP using when a child can climb over or dislodge the enclosure.
- Use only with the locking mechanism securely engaged.
- Never use an enclosure to keep child away from pool.

Failure to follow these warnings and the instructions could result in death or serious injury.

- Prior to use, the product must be fully erected, including side rails.
- Strings can cause strangulation! Never place items with a string around a child's neck such as hood strings or pacifier cords. Never suspend strings over product or attach strings to toys.
- Never place product near a window where cords from blinds or drapes can strangle a child.
- Child can become entrapped and die when improvised netting or covers are placed on top of product. Never add such items to confine child in product.
- When child is able to pull to standing position, remove large toys, mesh liners, and other objects that could serve as steps for climbing out.
- Discontinue use of the product when child is able to climb out or reaches the height of 35 in.(89 cm).
- Always provide the supervision necessary for the continued safety of your child. When used for playing, never leave child unattended.
- Child in play yard must be under supervision at all times.
- Never use this product if there are any loose or missing fasteners, loose joints, broken parts or torn mesh/fabric. Check before assembly and periodically during use. Contact ZETY for replacement parts. Never substitute parts.
- Keep hands, fingers, and other body parts clear of interlocking or folding joints during setup and disassembly.
- Use only on flat, level surfaces. Do NOT use at the top of stairs or on uneven ground.

STRANGULATION HAZARD

Children have STRANGLE when their necks became trapped between accessories and play yard frames.

- Remove the accessory anytime the child is in the play yard.



Retain these instructions for future reference.

For questions or comments, please email us at support@zetyproducts.com.

Care, Maintenance, and Storage

Use:

Use with care not to damage any part.

Cleaning:

Wipe wooden panels with a damp cloth. Avoid abrasive cleaners and excessive water to preserve the finish.

Disassembly:

- Disconnect the top and bottom connectors.
- Stack the panels flat for compact storage.

Storage:

Store the playpen in a cool, dry area to maintain its quality.